

Washing Symbols

 <p>Normal</p>	<p>A bucket of plain water with no lines underneath or dots inside means the garment can be machine washed on a normal setting with agitation, using any detergent and the hottest water available.</p>
 <p>Cool/Cold</p>	<p>A single dot inside the bucket indicates machine wash on cold, not exceeding 26.67°C or 80°F.</p>
 <p>Warm</p>	<p>Two dots washing symbol indicates machine wash on warm, not exceeding 40°C or 105°F.</p>
 <p>Hot</p>	<p>Three dots indicate machine wash on hot, not exceeding 50°C or 120°F.</p>
 <p>Hot</p>	<p>Four dots indicate machine wash on hot, not exceeding 60°C or 140°F.</p>
 <p>Hot</p>	<p>Five dots indicate machine wash on hot, not exceeding 70°C or 160°F.</p>
 <p>Hot</p>	<p>Six dots indicate machine wash on hot, not exceeding 95°C or 200°F.</p>
	<p>30°C (86°F) There are two horizontal lines underneath the bucket. Very mild temperature for fine wash.</p>
	<p>30°C (86°F) There is one line underneath the bucket. Mild fine wash.</p>
	<p>30°C (86°F) This laundry symbol features just the bucket with 30 inside. It indicates a fine wash.</p>
	<p>40°C (104°F) The bucket has two horizontal lines underneath it. It indicates a very mild wash.</p>
	<p>40°C (104°F) The bucket has one horizontal line underneath it. It indicates a mild wash.</p>

	40°C (104°F) This laundry symbol features just the bucket and 40 inside. It indicates the setting for colored wash.
	60°C (140°F) The bucket has one line underneath it. It indicates an Easy Care colored wash.
	60°C (140°F) This laundry symbol features just the bucket with the number 60 inside it. It indicates a colored wash.
	70°C (158°F) This laundry symbol features just the bucket with the number 70 inside it. It indicates a boil wash.
	95°C (203°F) This laundry symbol features just the bucket with the number 95 inside it. It indicates a boil wash.

Washing Machine Settings

 Permanent Press	One line underneath the bucket indicates to use the permanent press cycle, with a cold rinse before the spin.
 Delicate/Gentle	Two lines indicate to use the gentle or delicate cycle, with gentle machine agitation and a shorter wash cycle.

No Machine Washing

 Hand Wash	A hand over or inside the bucket indicates you should hand wash the item with a gentle detergent and water.
 Do Not Wash	A bucket that is crossed out means you shouldn't machine wash and is usually followed by dry cleaning or hand washing instructions.

Bleaching Symbols

 <p>Any Bleach (when needed)</p>	<p>An empty triangle indicates to bleach when needed with any type of laundering bleach.</p>
 <p>Only Non-chlorine Bleach (when needed)</p>	<p>A triangle with diagonal lines inside indicates to use color safe, non-chlorine bleach only.</p>
 <p>Do Not Bleach</p>	<p>A triangle that is crossed out means do not use any type of bleach. The garment is not colorfast, or the material is unable to hold up to bleach.</p>

 
Dryer Cycles

 <p>Low</p>	<p>A square with circle inside symbol and a single dot indicates normal machine drying on a low setting.</p>
 <p>Medium</p>	<p>A square with circle inside symbol that has two dots indicates normal machine drying on a medium setting.</p>
 <p>High</p>	<p>A square with circle inside symbol that has three dots indicates normal machine drying on the high setting.</p>
 <p>No Heat</p>	<p>A square circle dot laundry symbol that features a large, solid or filled-in circle dot indicates normal machine drying with no heat or the air only cycle.</p>

Dryer Machine Settings

 <p>Normal</p>	<p>A square with a large, empty circle inside indicates tumble dry normal.</p>
 <p>Permanent Press</p>	<p>One line underneath a square with a large circle inside indicates to tumble dry on the permanent press setting.</p>
 <p>Delicate/Gentle</p>	<p>Two lines underneath the square with a large circle inside indicate to tumble dry on the gentle cycle.</p>

No Machine Drying

 
 <p>Do Not Tumble Dry</p>	<p>A square with a large circle inside that is crossed out means do not tumble dry.</p>
 <p>Do Not Dry</p>	<p>A square that is crossed out means do not machine dry.</p>

Air Drying

 <p>Line Dry/Hang to Dry</p>	<p>A square with a semicircle at the top indicates to line dry either indoors or outdoors.</p>
 <p>Drip Dry</p>	<p>A square with three vertical lines inside indicates to drip dry, usually by hanging a dripping wet garment on a line.</p>
 <p>Dry Flat</p>	<p>A square with a single horizontal line indicates to lay the garment flat for drying.</p>
 <p>Dry in the Shade</p>	<p>A square with two diagonal lines in the upper corner indicates to dry the garment in the shade, out of direct sunlight.</p>
 <p>Do Not Wring</p>	<p>A crossed out symbol of a twisted towel indicates you should not wring or twist the garment to remove excess water.</p>

Ironing Symbols

 <p>Any Heat</p>	<p>An empty iron symbol indicates you can iron at any temperature, with or without steam.</p>
 <p>Low</p>	<p>An iron with one dot indicates a low setting, 110°C or 230°F, with or without steam.</p>
 <p>Medium</p>	<p>Two dots inside the iron indicate a medium setting, 150°C or 300°F, with or without steam.</p>

 High	Three dots inside the iron indicate a high setting, 200°C or 390°F, with or without steam.
 No Steam	An iron with crossed out lines underneath means do not use steam when ironing.
 Do Not Iron	A crossed out iron means do not iron.

Dry-Cleaning Symbols

 Dry Clean	An empty circle indicates to dry clean only.
	A circle with an A means dry-clean with any solvent.
	A circle with a P means dry-clean with any solvent except trichloroethylene.
	A circle with an F means dry-clean with petroleum solvent only.
 Do Not Dry Clean	An empty crossed out circle means do not dry clean.
	A circle with a lower left diagonal line means short cycle.
	A circle with a lower right diagonal line means low heat.
	A circle with an upper left diagonal line means reduce moisture.
	A circle with an upper right diagonal line means no steam.